
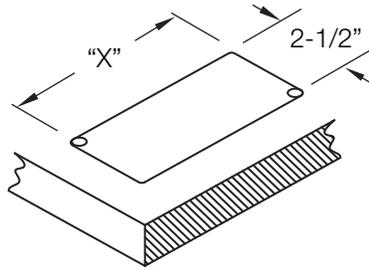








# BYRNE™

## INSTALLATION INSTRUCTIONS FOR MINIPORT

Install data jacks as described in the installation instructions provided with data adapters, BE01421

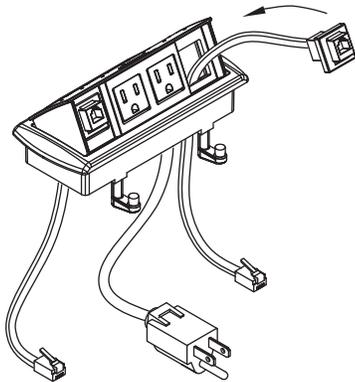

Gangings	"X" Dim.
Single Miniport	6"
Double Miniport	12"
Triple Miniport	18"

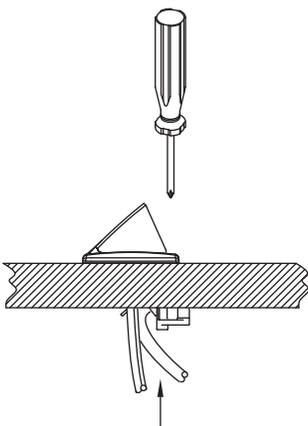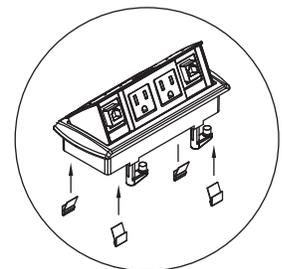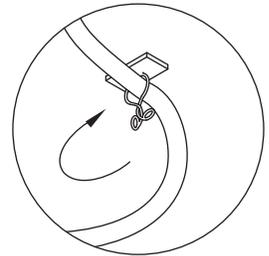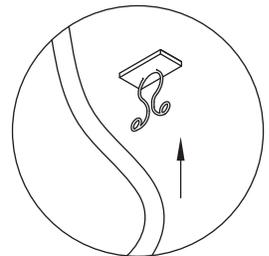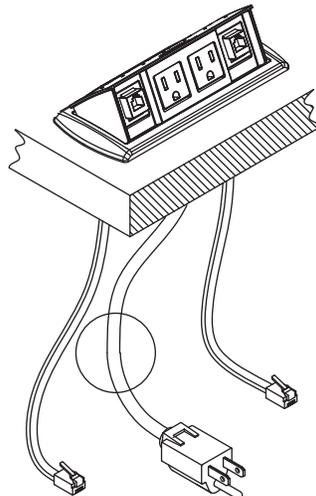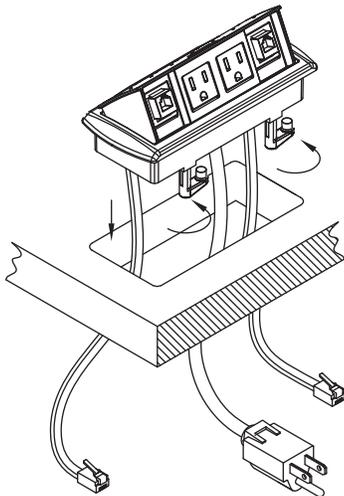

**Note:** In a conduit application, conduit should be supported according to local code. When managing conduit and cabling exiting the unit, ensure there is adequate slack to allow unit to open properly

Use phillips head screwdriver to tighten locking cams snugly to the work surface. To Access back screw, flip back power enclosure past stops. After locking cam is secured, rotate power enclosure back into place. **Do not overtighten.**