
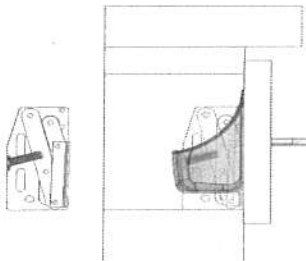
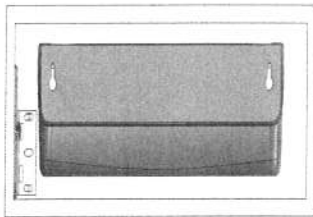


DRAWER STORAGE BIN

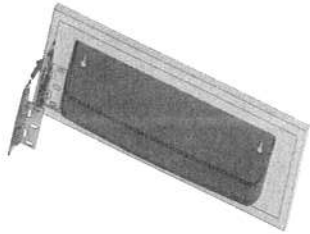

1. Trace inside front panel perimeter of sink.
2. Remove panel.
3. Rest hinge on inside of frame of the cupboard (making sure edge of hinge fit flush with front of opening). Using the hinge as a guide, mark top and bottom holes on inside of frame.
4. Lay panel face down on flat surface. Then place edge of closed hinge on scribed perimeter (making sure bottom of small hinge plate is placed at the intersection of the scribed lines) mark two screw holes then attach hinge.
5. Center tray on panel 1" from top. Mark holes for screws at tip of tear drop opening in tray. Install screws leaving enough clearance for tray to slide on.
6. Screw hinges on both side of the panel. Then screw hinges on both side of the frame into holes previously marked.
7. Slide plastic tray into place (ref. step 5) and add the ring holder.

Included : Standard tray (1)
 Divided tray (1)
 2 sets of hinges with screws (20)
 Ring holders (2)