


INSTRUCTIONS FOR INSTALLING 30810 PILASTER POST SHOE PACK

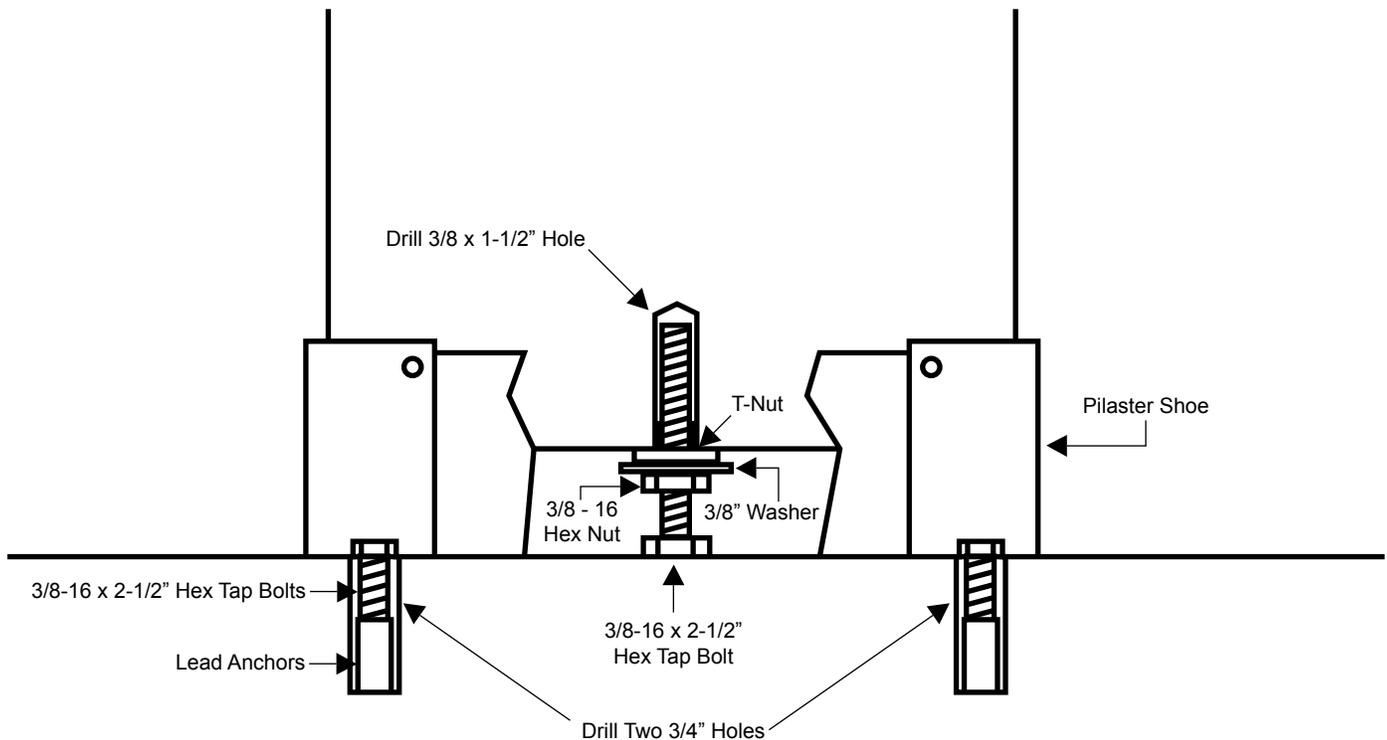

- 1. Locate and drill two 3/4" holes into floor for pilaster shoe anchor bolts.**
- 2. Insert lead anchors into holes.**
- 3. Adjust 3080 pilaster shoes for snug fit on pilaster. Tighten into place.**
- 4. Drill a 3/8" x 1-1/2" hole into bottom of pilaster.**
- 5. Insert T-Nut into 3/8" drilled hole.**
- 6. Screw hex bolt (with nut and washer) into T-Nut.**
- 7. Place pilaster into position. Level as needed. Tighten hex nut.**
- 8. Cut spacer plate to size as needed.**
- 9. Insert spacer plate.**
- 10. Drill two horizontal holes through spacer plate and pilaster.**
- 11. Insert and tighten thru bolts.**