



WINE PEGS

INSTALLATION INSTRUCTIONS



JANUARY 2022


METHOD 1

FLAT PANEL INSTALLATION WITH Z-CLIPS

The Z-clip assembly method requires wood framing and is therefore more suitable for remodels or new constructions. It can still be installed in any room as long as the Z-clips are screwed into the wood frames to ensure strength and safety. We recommend using 3/4" (19 mm) thick panels only.

STEP 1

Pre-drill your Z-clip moldings (A). Install one half of the Z-clip molding onto the wall, making sure to screw into the wood frame. Pre-drill the holes in your decorative panel according to the layout of your wine pegs (see online technical datasheet).

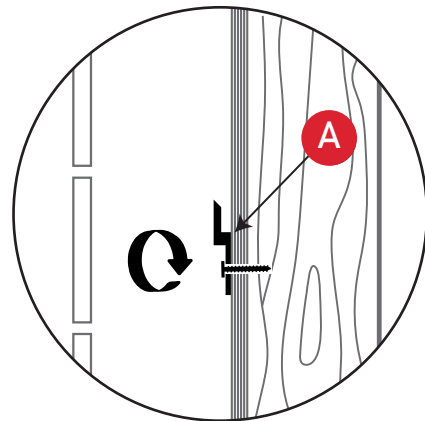


STEP 2

Flat decorative panel installation:


Screw the other half of the Z-clip molding (A) onto the back of your decorative panel and install all your wine pegs using the JCB-B bolts included in each kit.

Continue to step 3.

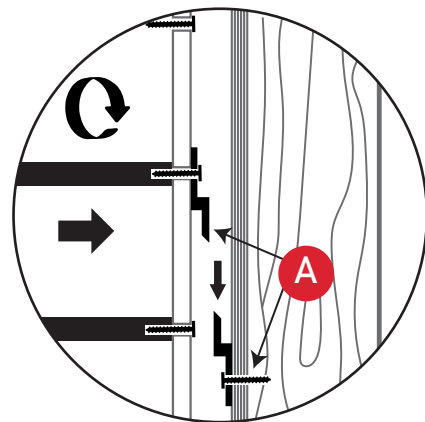

STEP 3

Install the assembled decorative panel to the wall by clipping the two Z-clip moldings (A) together. To ensure safety, make sure that the thread (B) that goes out to screw the wine pegs is always at least 3/4" (19 mm) and no longer than 1" (25 mm).

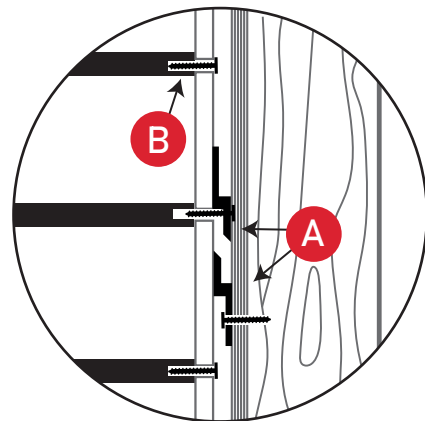

*Z-clip moldings not included, please see next page for product numbers.

REQUIRED HARDWARE AND ACCESSORIES

Z-SHAPED MOLDINGS

No.	Length	Height	Width	Thickness	Qty/Box
318708D10	8' (2.44 m)	1 3/8"	1/4"	1/8"	1
318712D10	12' (3.66 m)	1 3/8"	1/4"	1/8"	1

