
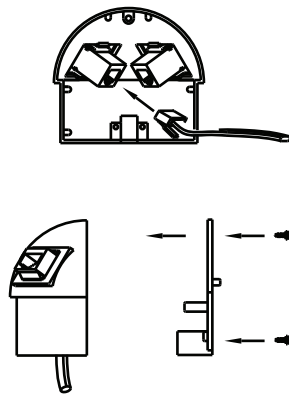



BYRNE™

INSTALLATION INSTRUCTIONS FOR POWER/COMMUNICATION SPHERE

Install data jacks as described in the installation instructions provided with data adapters, BE01421

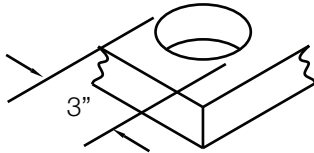

Screw back into place

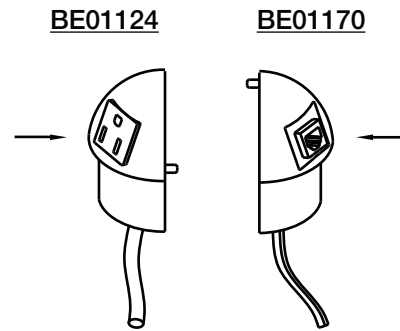

Snap the two halves together and drop into the 3" hole.
Optional: For a tighter fit, apply double-sided tape between the two sphere halves.

