


# FACE FRAME BOTTOM BRACKET TEMPLATE

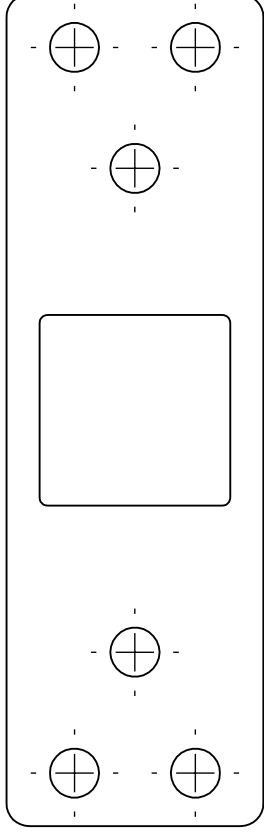

LINEUP THE LINE THAT MATCHES YOUR UNIT AND CABINET WITH THE INSIDE CABINET OPENING

12" UNIT IN  
▽ BLIND RIGHT/LEFT  
▽ DOOR CABINET

15" UNIT IN  
▽ BLIND RIGHT/LEFT  
▽ DOOR CABINET

18" UNIT IN  
▽ BLIND RIGHT/LEFT  
▽ DOOR CABINET

ALIGN EDGE WITH  
▽ BACK OF STILE ▽


▽ 18" UNIT IN  
BLIND LEFT/RIGHT  
DOOR CABINET

▽ 15" UNIT IN  
BLIND LEFT/RIGHT  
DOOR CABINET

▽ 12" UNIT IN  
BLIND LEFT/RIGHT  
DOOR CABINET

T-FF-587-1123

△ ALIGN EDGE WITH TOP OF CABINET OPENING △

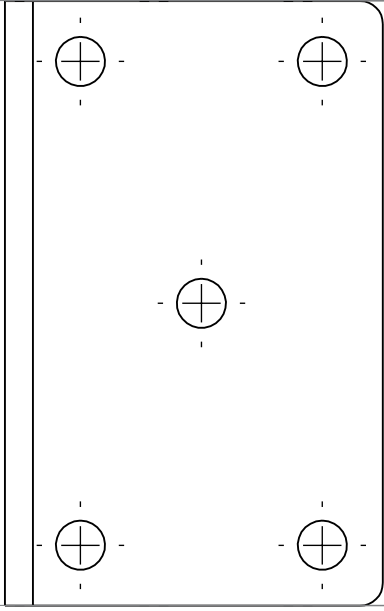

△ BEND ON THIS LINE FOR 18" UNIT  
△ IN BLIND LEFT/RIGHT DOOR CABINET △

△ BEND ON THIS LINE FOR 15" UNIT  
△ IN BLIND LEFT/RIGHT DOOR CABINET △

△ BEND ON THIS LINE FOR 12" UNIT  
△ IN BLIND LEFT/RIGHT DOOR CABINET △

△ BEND ON THIS LINE FOR 18" UNIT  
△ IN BLIND RIGHT/ LEFT DOOR CABINET △

△ BEND ON THIS LINE FOR 15" UNIT  
△ IN BLIND RIGHT/ LEFT DOOR CABINET △

△ BEND ON THIS LINE FOR 12" UNIT  
△ IN BLIND RIGHT/ LEFT DOOR CABINET △

# FACE FRAME TOP BRACKET TEMPLATE

T-FF-587-1123